

EINBAUANLEITUNG



Hinweise/Sicherheitshinweise

- Die allgemeinen Unfallverhütungsvorschriften bei Dacharbeiten beachten.
- Die Baustelle gegen herabfallende Teile sichern.
- Bauphysikalische Grundlagen wie Wärmedämmung, Feuchteschutz, Regensicherheit/Wasserdichtheit und Lärmschutz beachten.
- Die Zahlen geben immer die Reihenfolge der Montage an!
- Technische Änderungen vorbehalten.


 Eingriffe in Tragwerkstrukturen dürfen nur von qualifizierten Fachkräften ausgeführt werden!

In schneereichen Gebieten ist eine Scheefang-einrichtung oberhalb des Fensters zu montieren.

Für Einbaulatten nur Holz der Sortierklasse S. 13 verwenden. Die Höhen der Dachlatten und die Höhe der Einbaulatten müssen gleich sein!



Wellker Dachfenster Premium Kunststoff R4 made by Roto

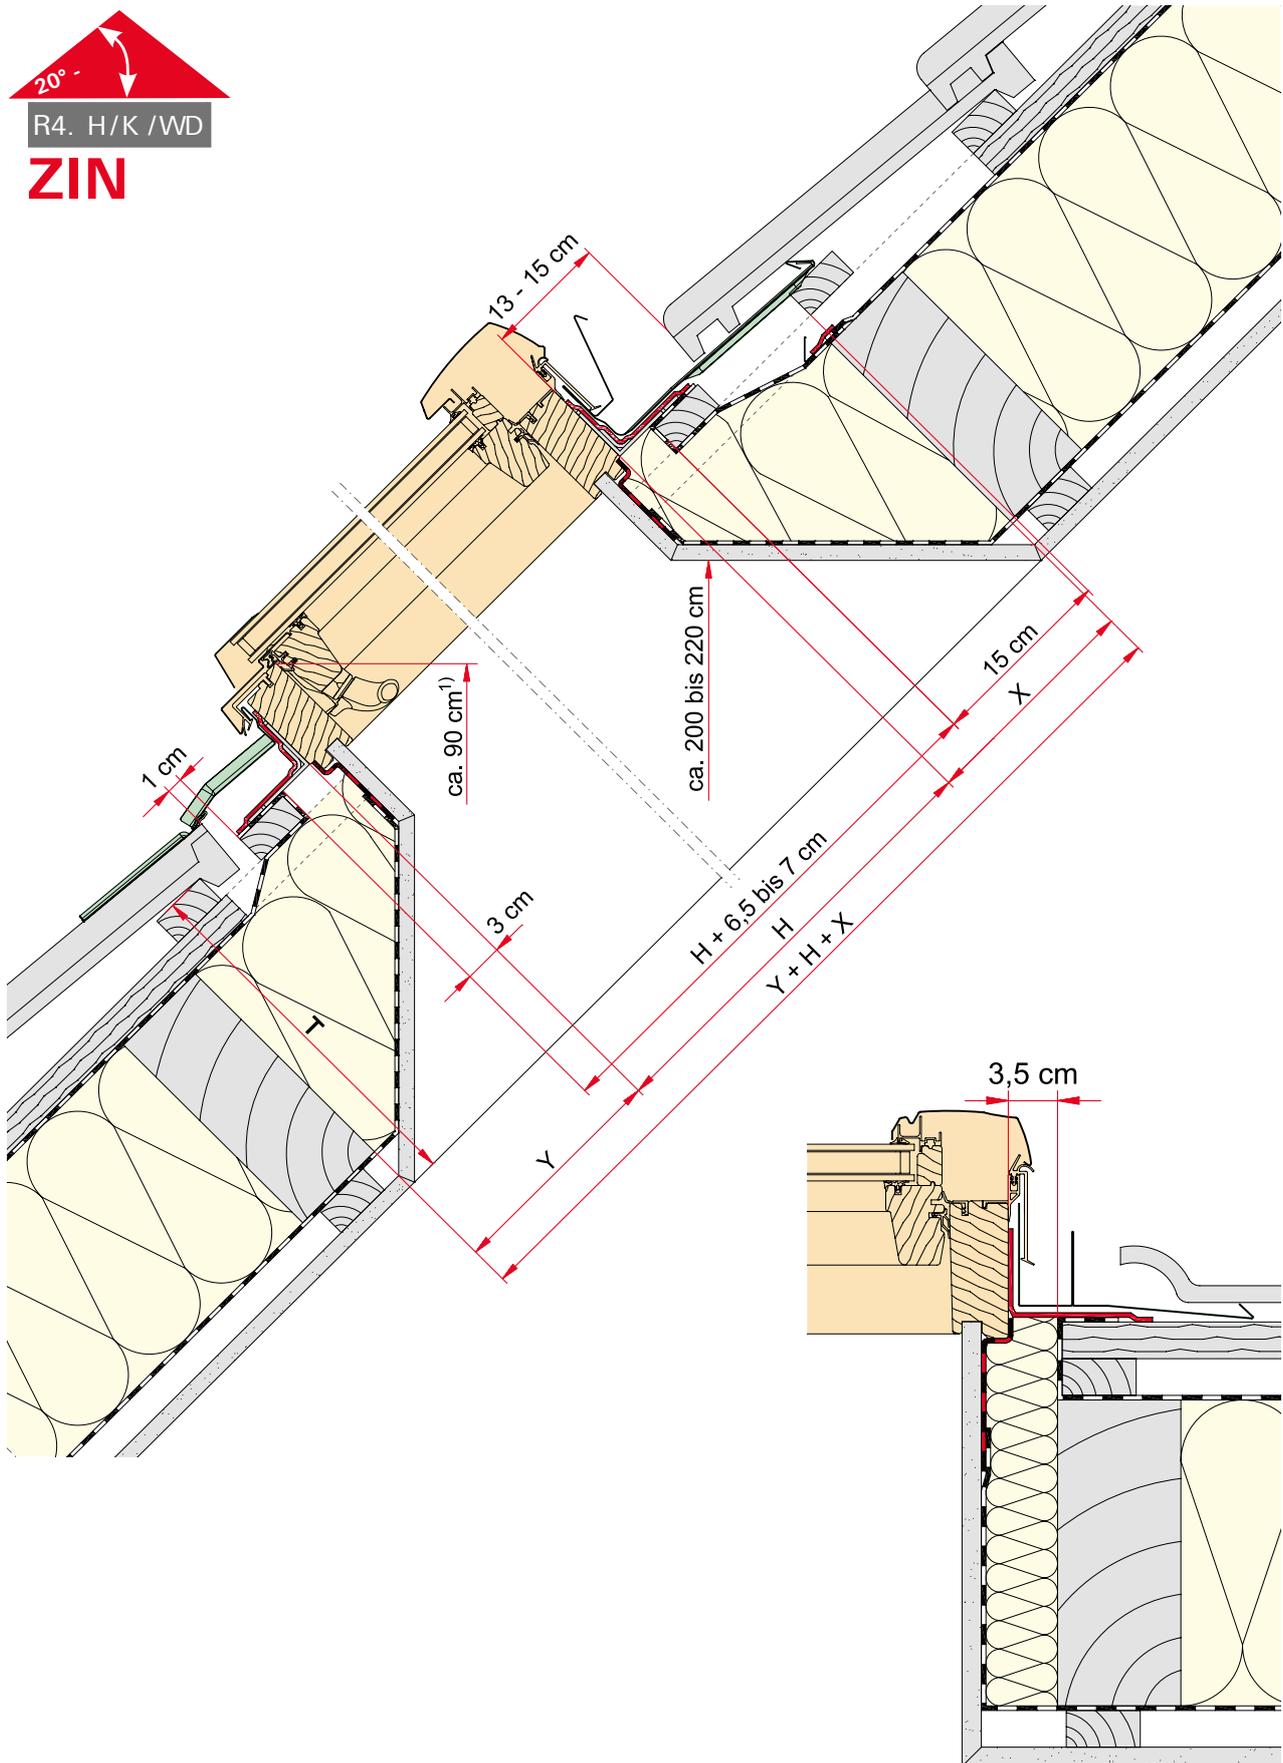

Wellker Dachfenster Premium Kunststoff R4 made by Roto



ZIN ▲		20°	25°	30°	35°	40°	45°	50°	55°	60°	65°	70°
T=25 cm	X	46	36	29	24	20	17	14	12	10	8	6
	Y	6	8	10	12	14	17	20	24	29	36	46
T=26 cm	X	48	38	31	25	21	18	15	13	11	9	7
	Y	7	9	11	13	15	18	21	25	31	38	48
T=28 cm	X	54	42	34	28	24	20	17	14	12	10	8
	Y	8	10	12	14	17	20	24	28	34	42	54
T=30 cm	X	59	46	38	31	26	22	18	15	13	10	8
	Y	8	10	13	15	18	22	26	31	34	46	59
T=32 cm	X	65	51	41	34	28	24	20	17	14	11	9
	Y	9	11	14	17	20	24	28	34	41	51	65
T=35 cm	X	74	57	46	38	32	27	22	19	15	12	10
	Y	10	12	15	19	22	27	32	38	46	57	74
T=36 cm	X	76	59	48	40	33	28	23	20	16	13	10
	Y	10	13	16	20	23	28	33	40	48	59	76
T=40 cm	X	87	68	55	45	38	32	27	22	19	15	12
	Y	12	15	19	22	27	32	38	45	55	68	87
T=45 cm	X	101	79	64	52	44	37	31	26	21	17	13
	Y	13	17	21	26	31	37	44	52	64	79	101
T=50 cm	X	115	90	72	60	50	42	35	29	24	19	15
	Y	15	19	24	29	35	42	50	60	72	90	115

Wellker Dachfenster Premium Kunststoff R4 made by Roto




A

 $\varnothing 4,0 \times 30$

B


C

 $\varnothing 3,5 \times 20$

D

 $\varnothing 3,9 \times 19$

E


F


G


	A	B	C	D	E	F	G
R4. K	8	1	2		2		8
R4. K xx/ 9, xx/11 xx/14	12	3	2	4	2	2	8



A

 $\varnothing 4,0 \times 30$

B





C

 $\varnothing 3,5 \times 20$

E


	A	B	C	E
R4. H	8	1	2	2

Wellker Dachfenster Premium Kunststoff R4 made by Roto

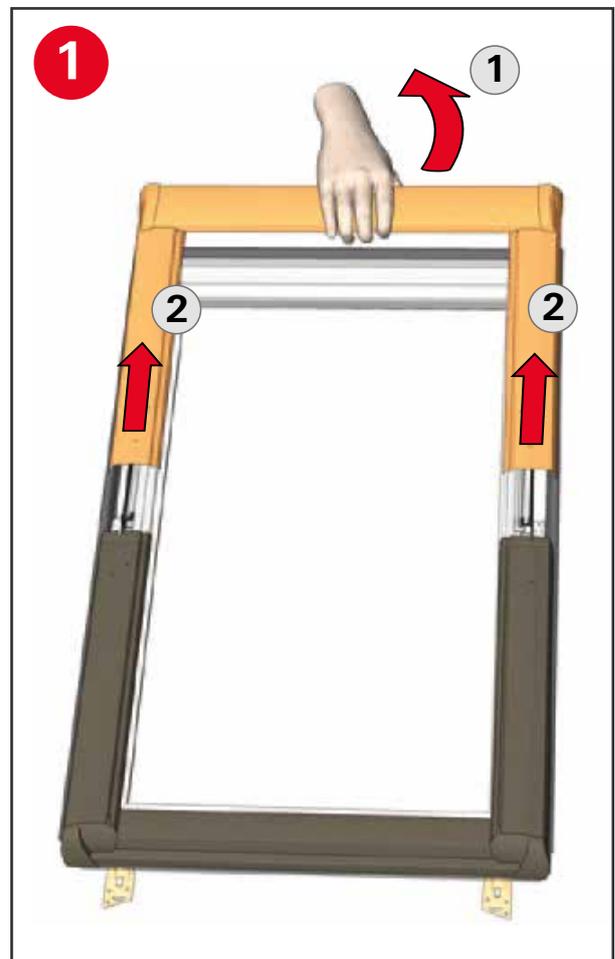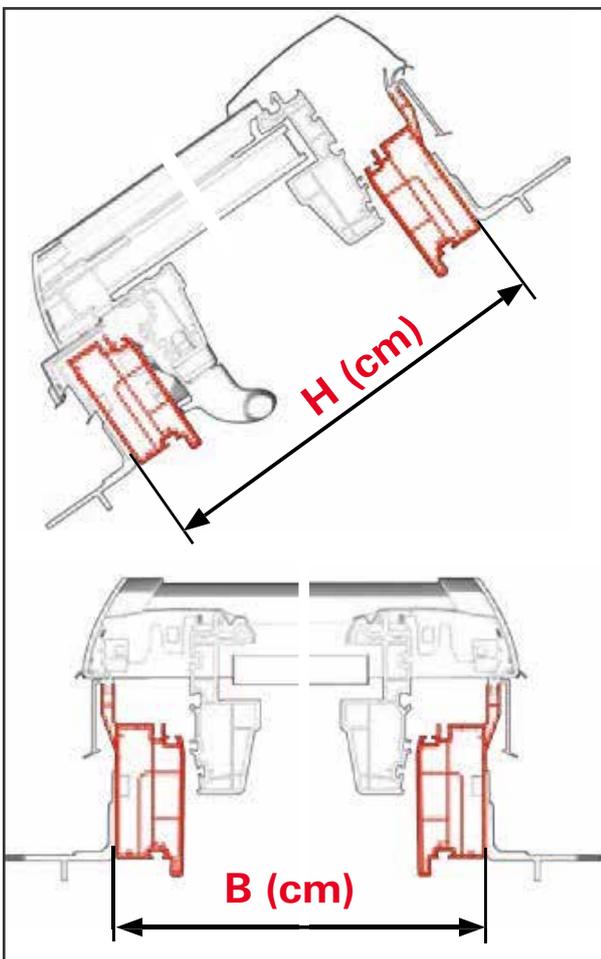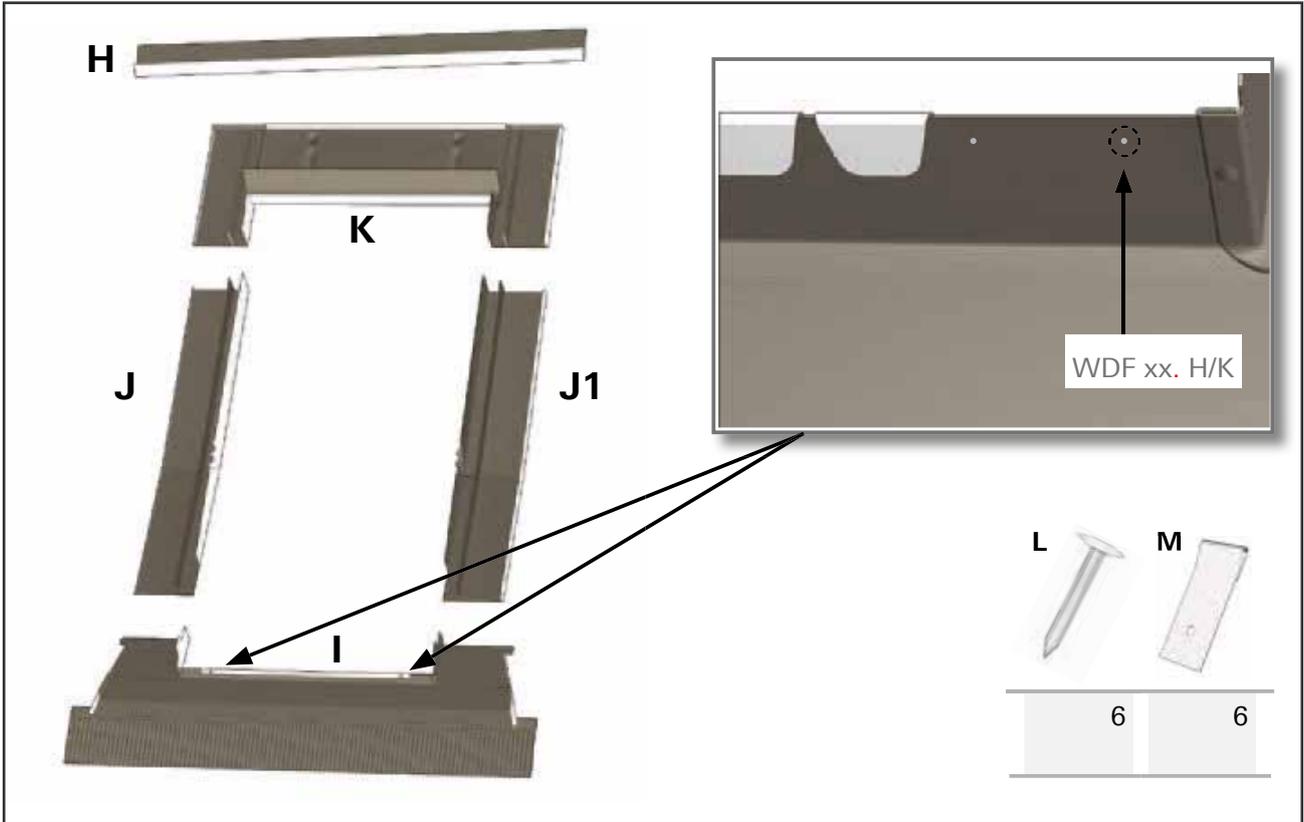

Wellker Dachfenster Premium Kunststoff R4 made by Roto




2 WDF xx/ 9
R4. **K** xx/11
xx/14

  **D 4x**
ø3,9 x19

 **F 2x**




3

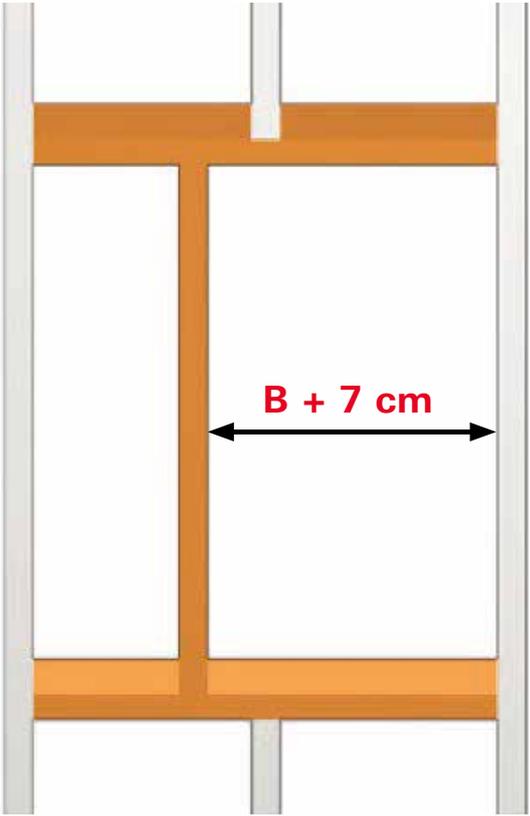




B + 7 cm

4

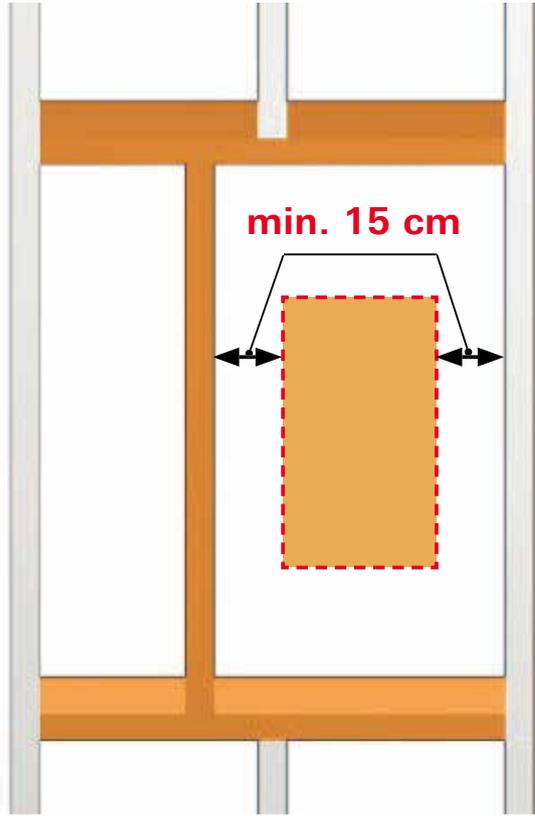

min. 15 cm


Wellker Dachfenster Premium Kunststoff R4 made by Roto

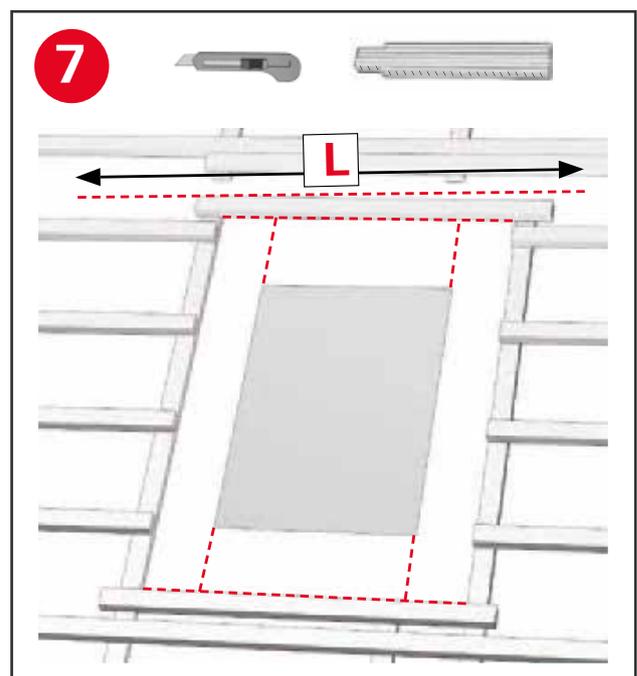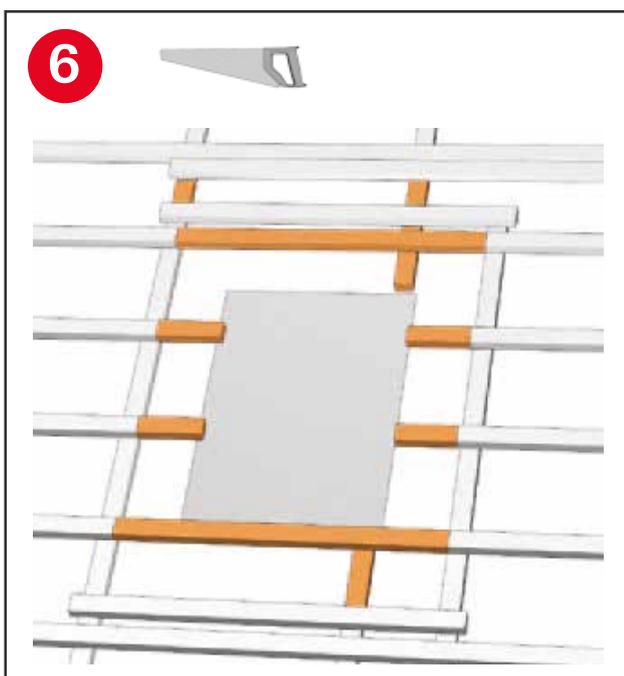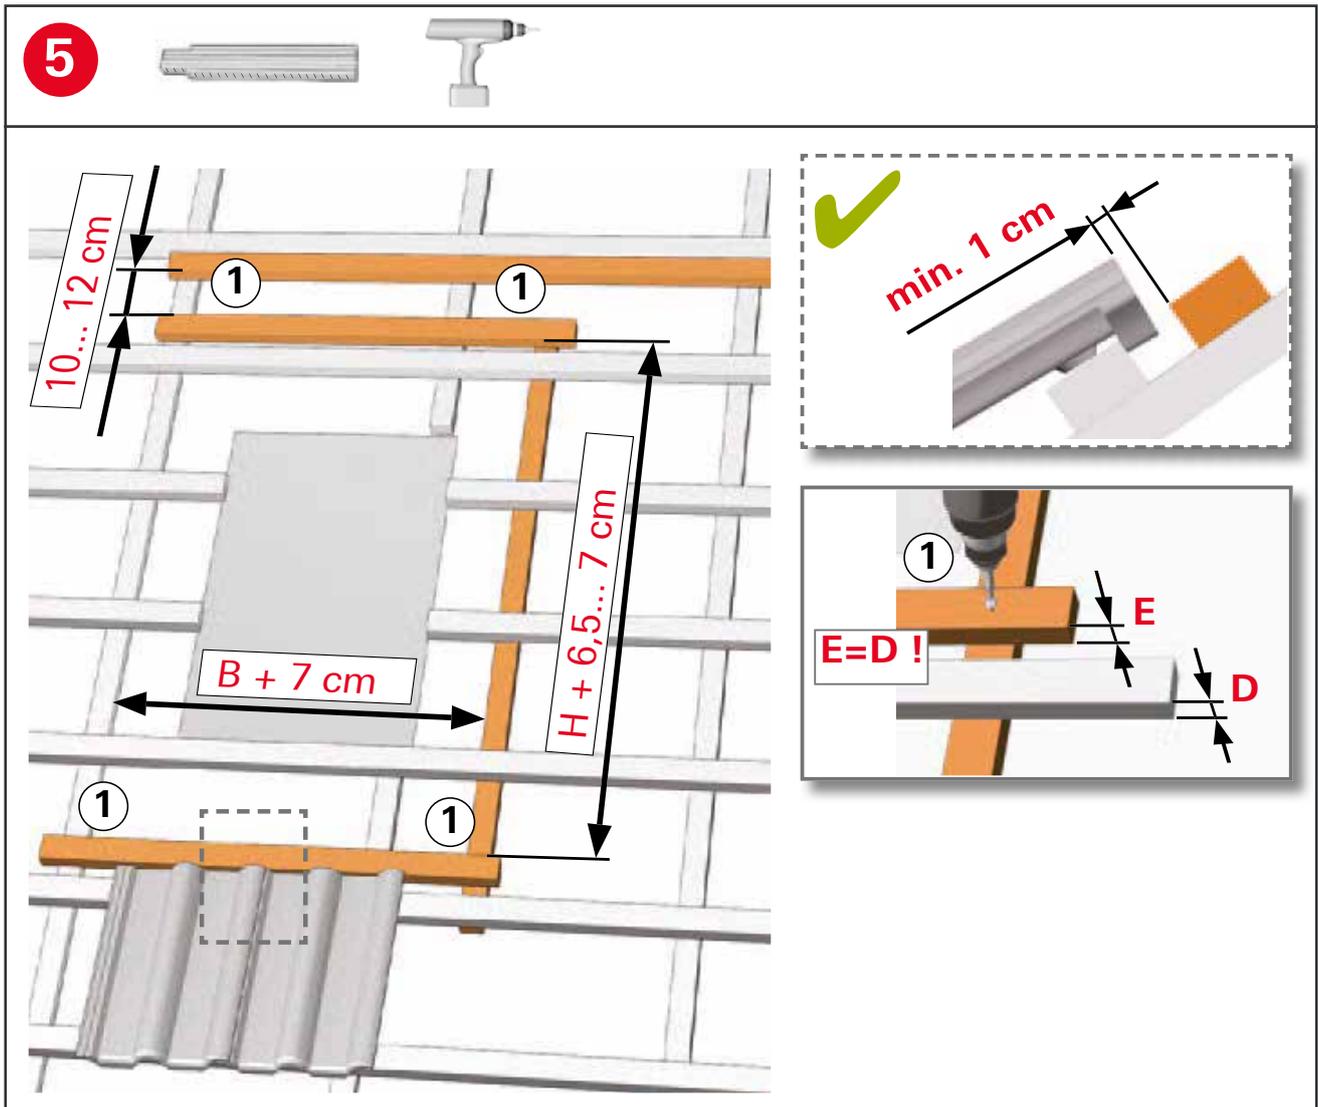



Wellker Dachfenster Premium Kunststoff R4 made by Roto





8  

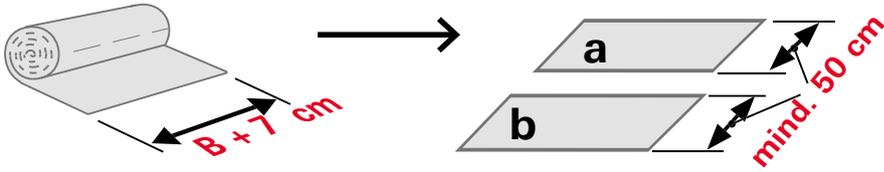


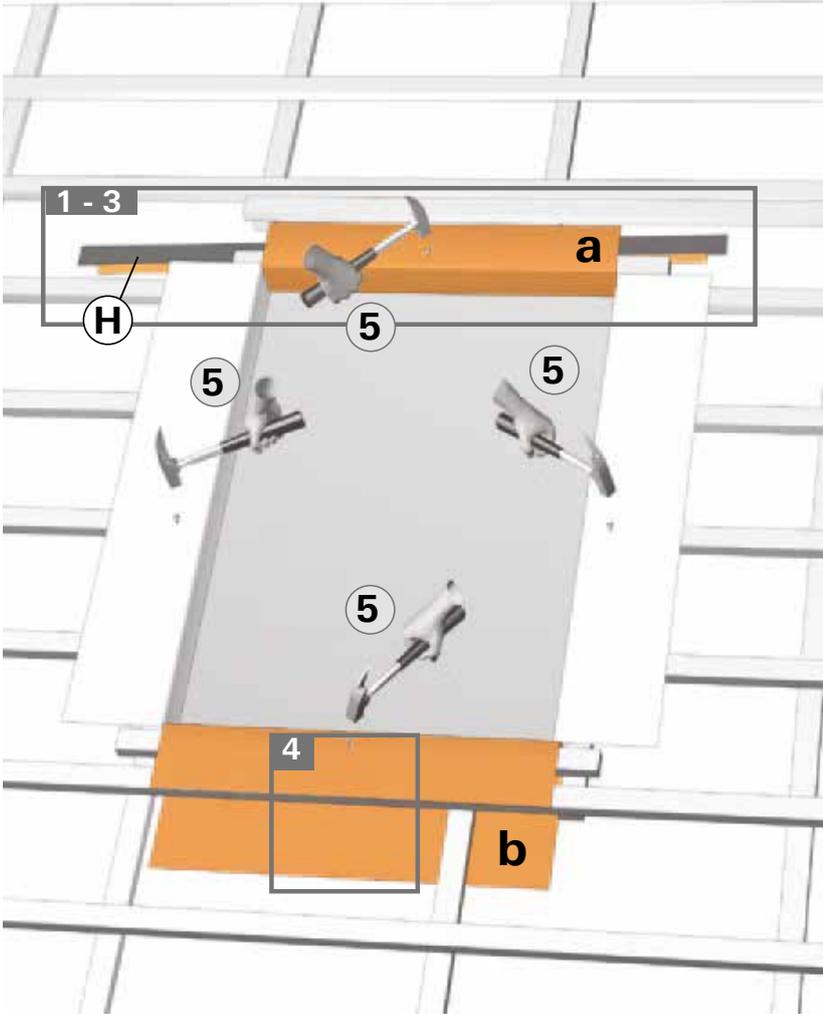1 - 3 


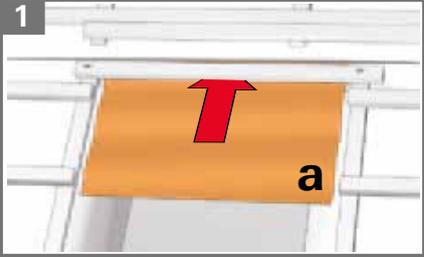
1 

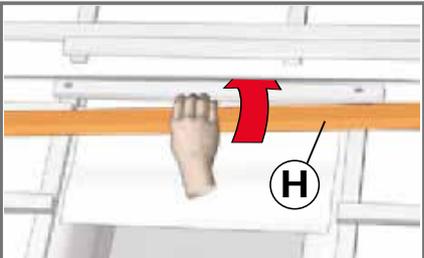2 


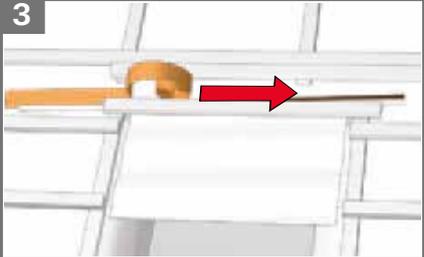
3 

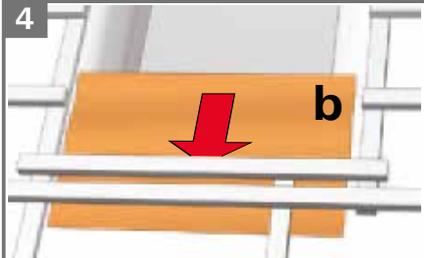4 

Wellker Dachfenster Premium Kunststoff R4 made by Roto

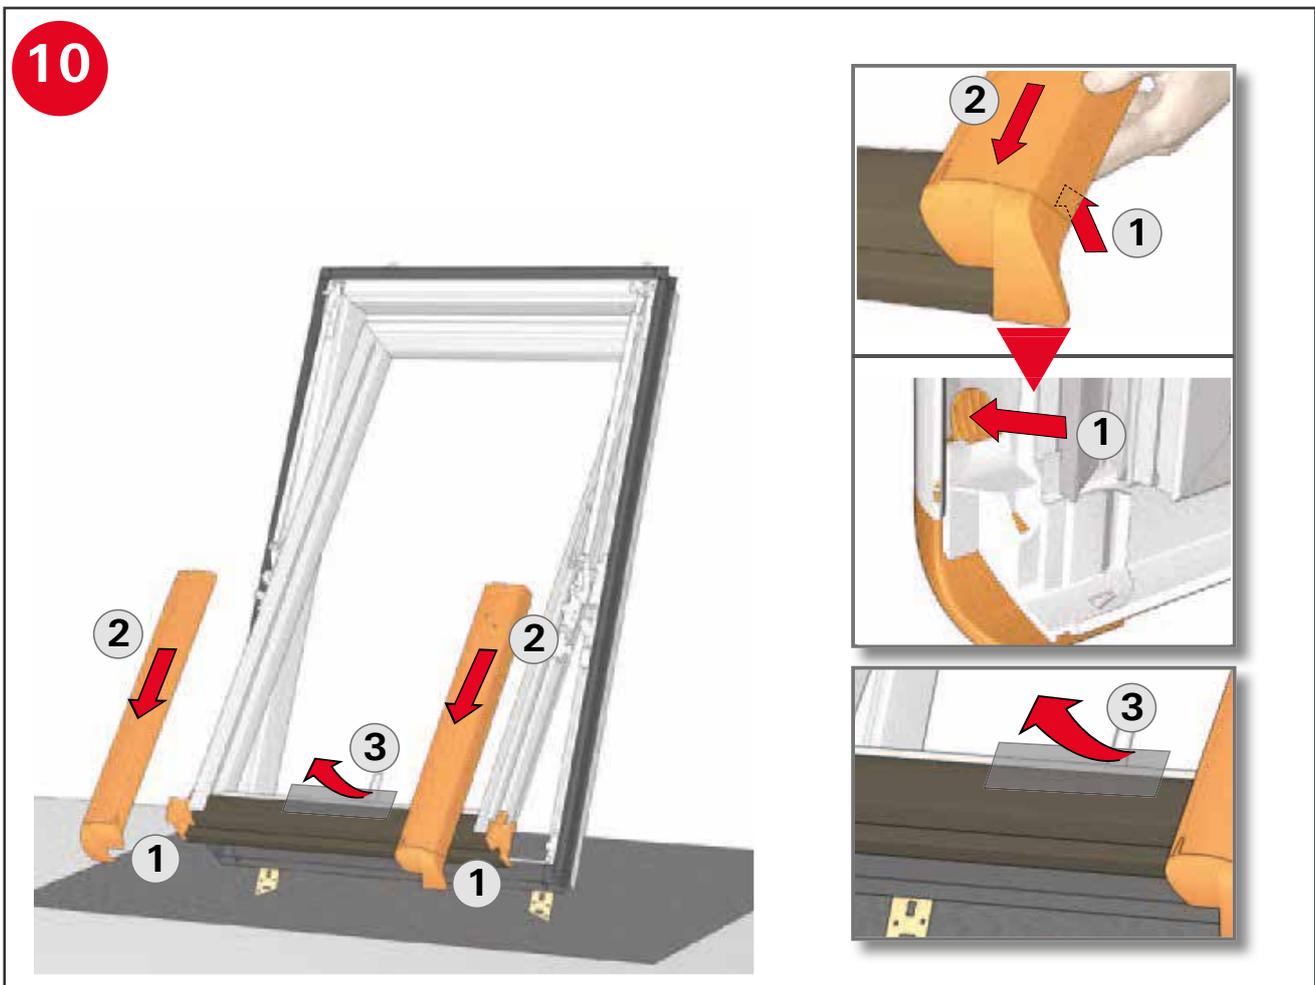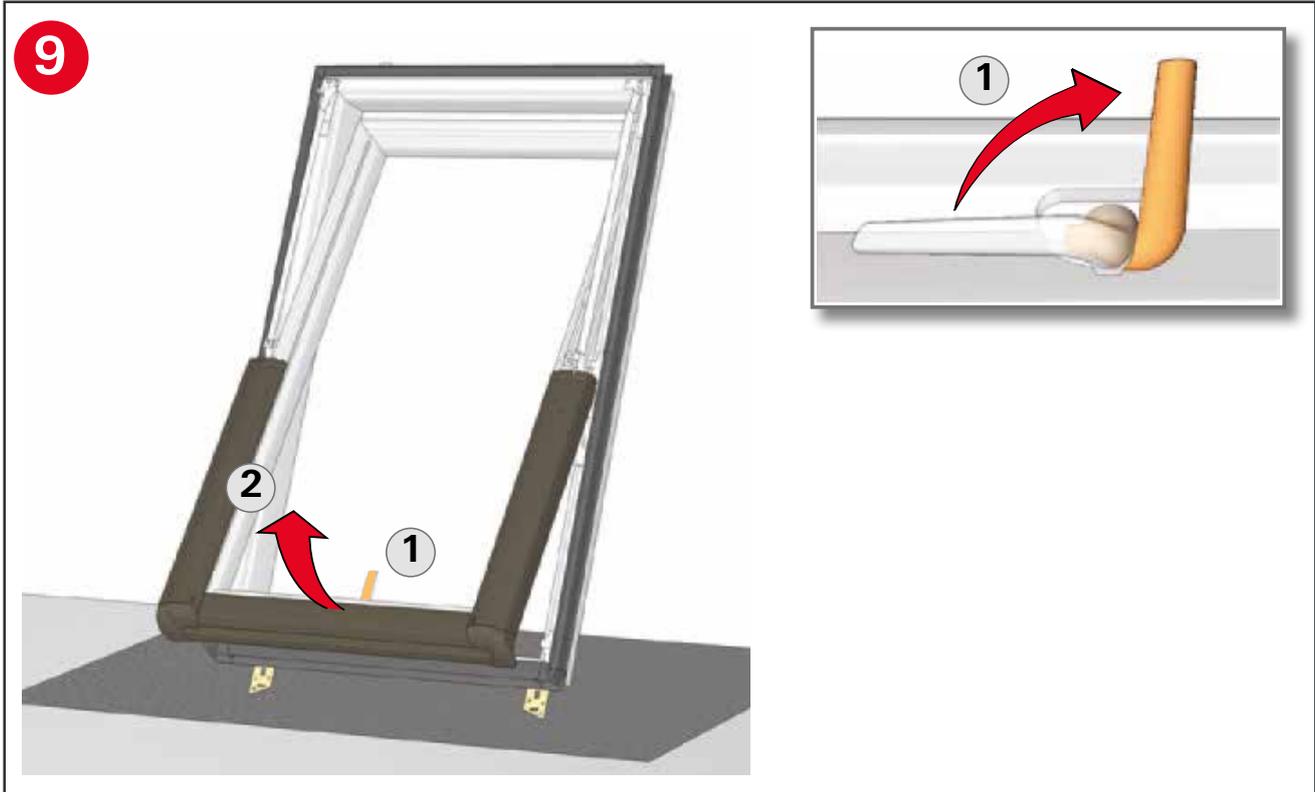




Wellker Dachfenster Premium Kunststoff R4 made by Roto

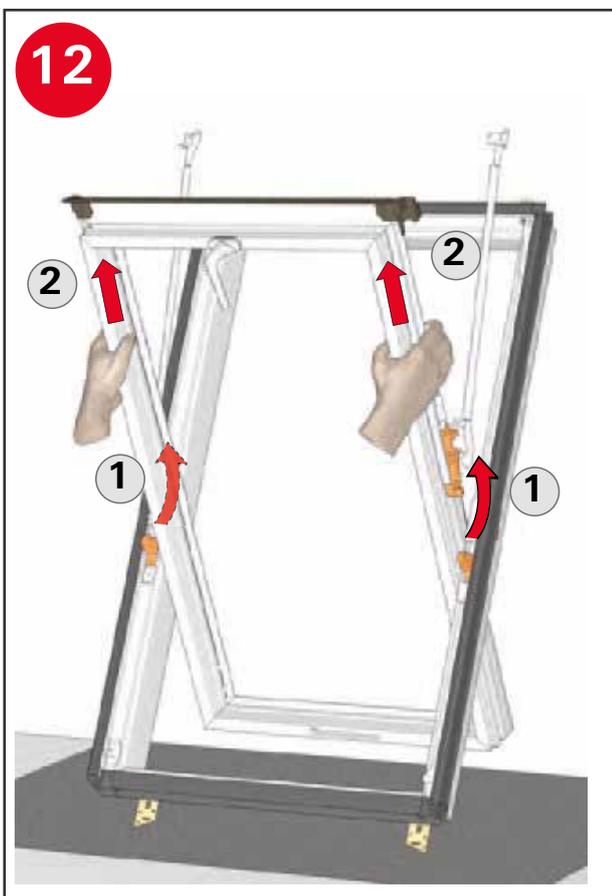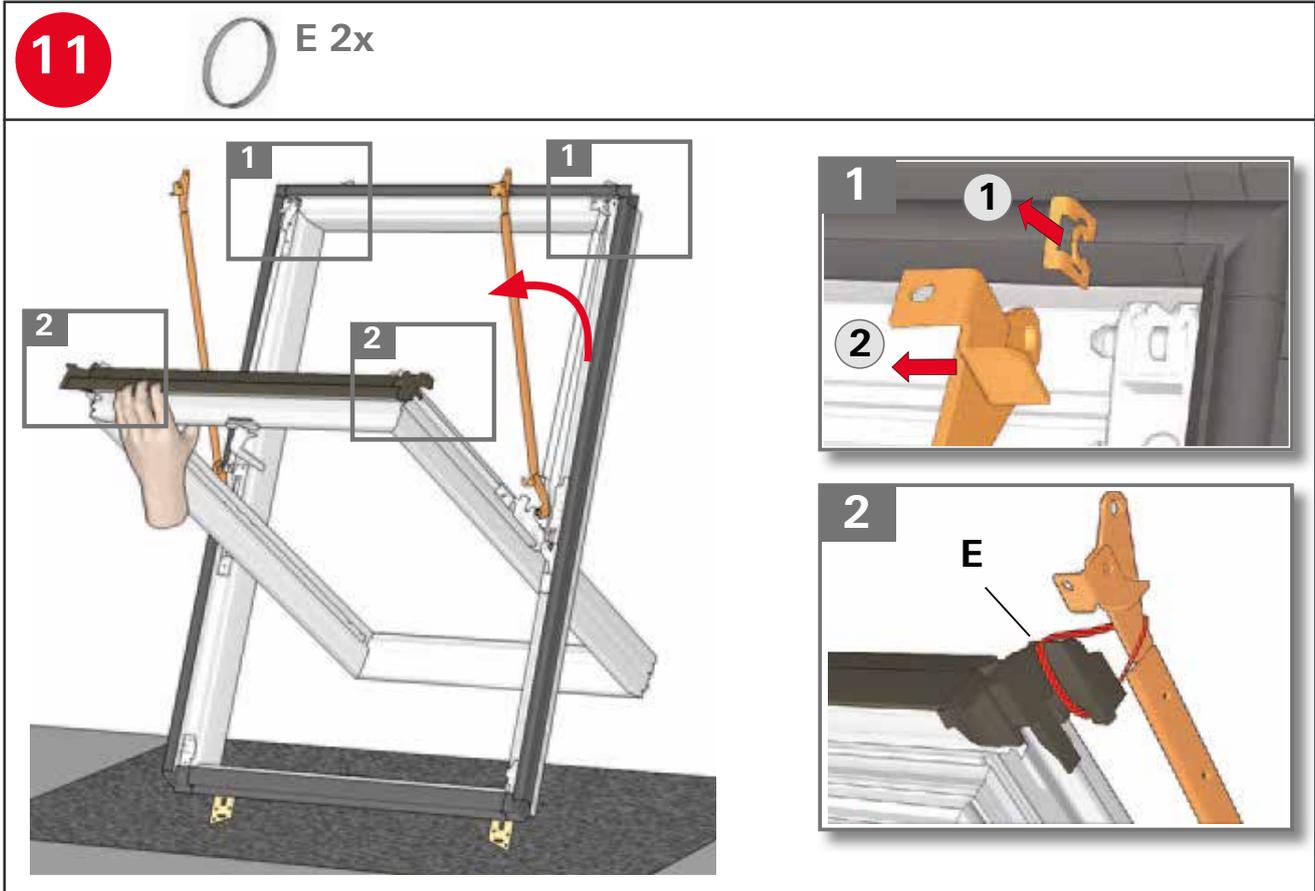





Wellker Dachfenster Premium Kunststoff R4 made by Roto






14  **A 4x**
ø4,0 x30

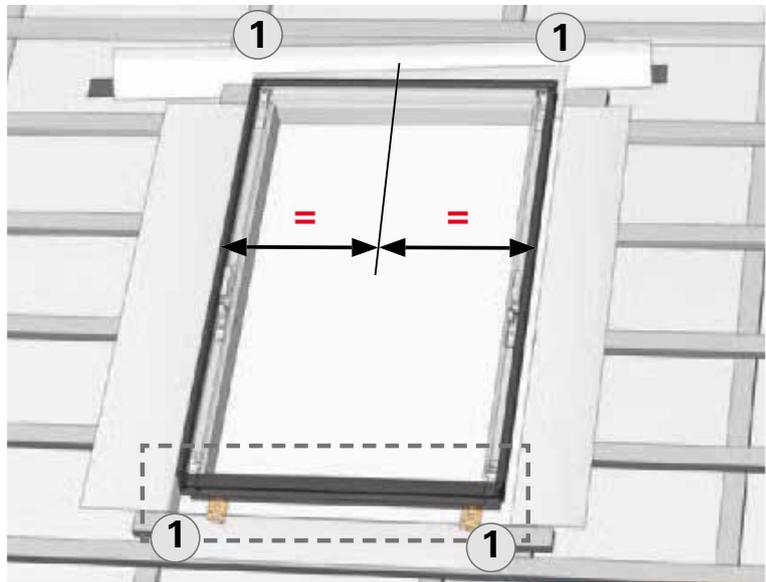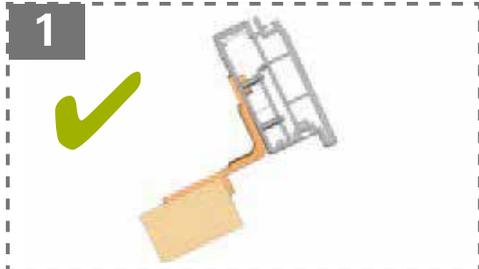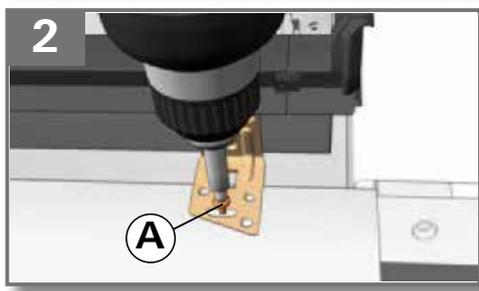15

Wellker Dachfenster Premium Kunststoff R4 made by Roto

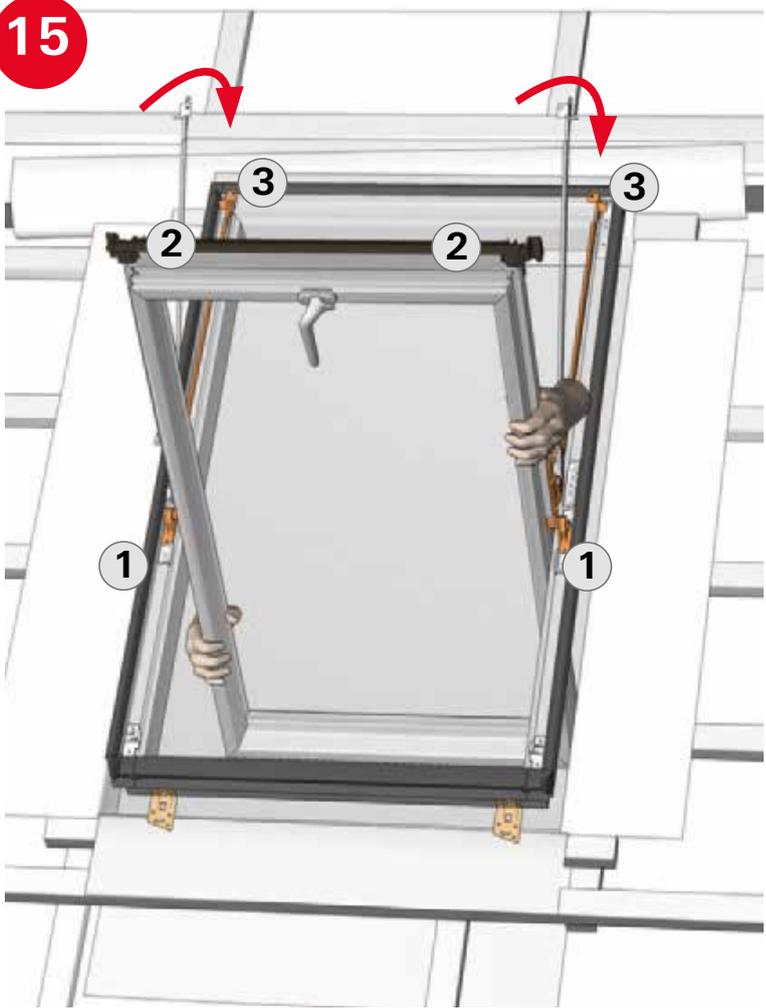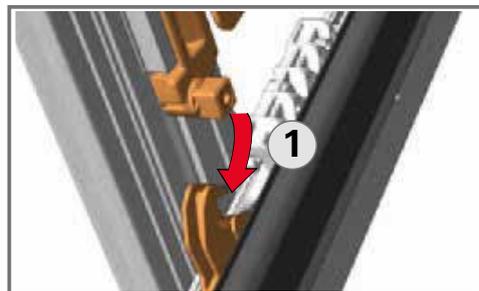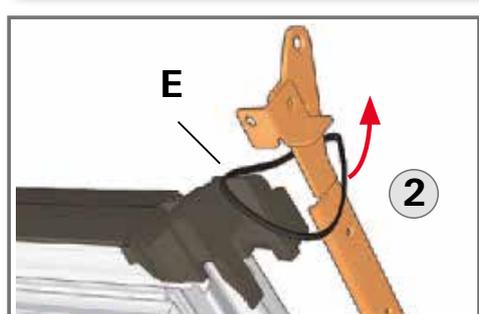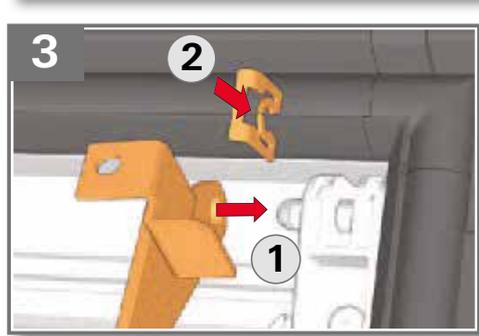






Wellker Dachfenster Premium Kunststoff R4 made by Roto

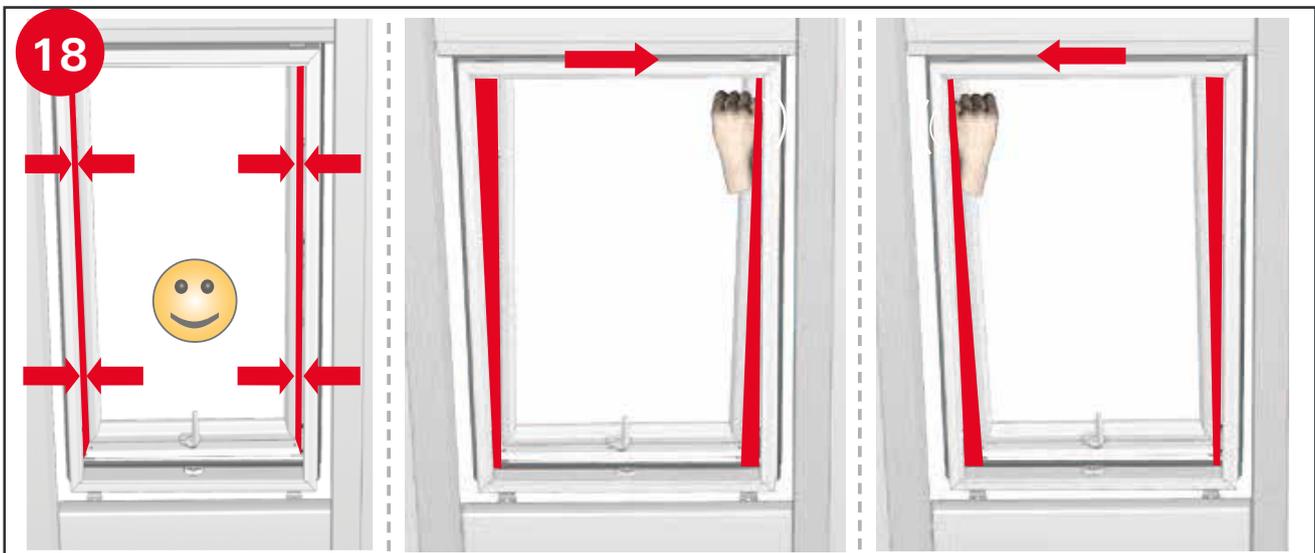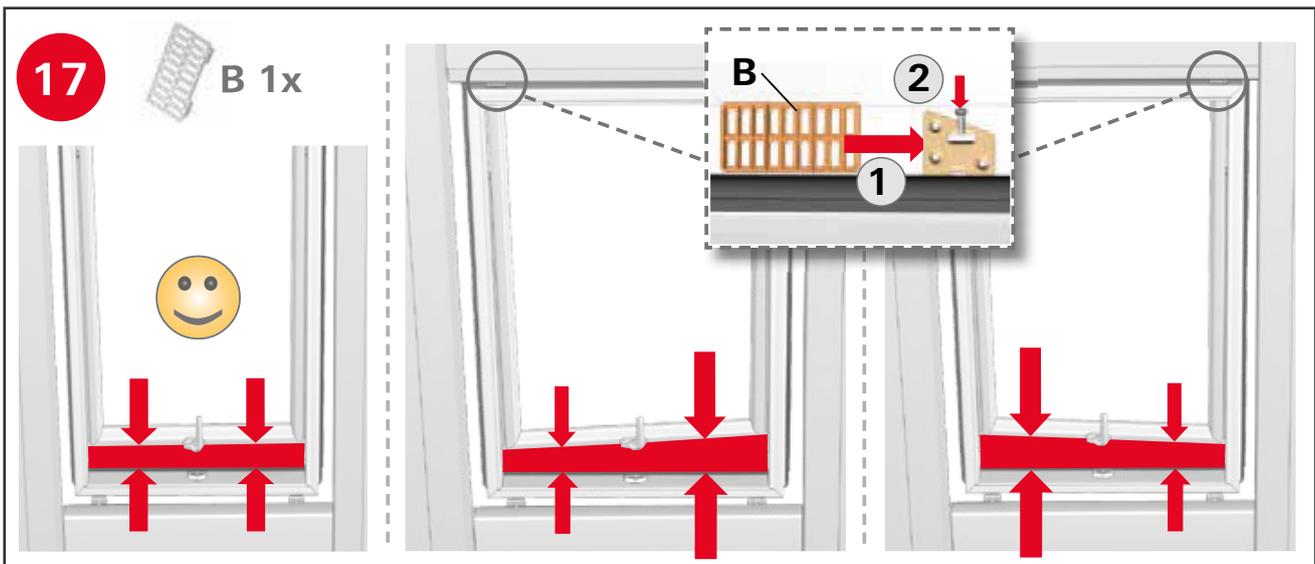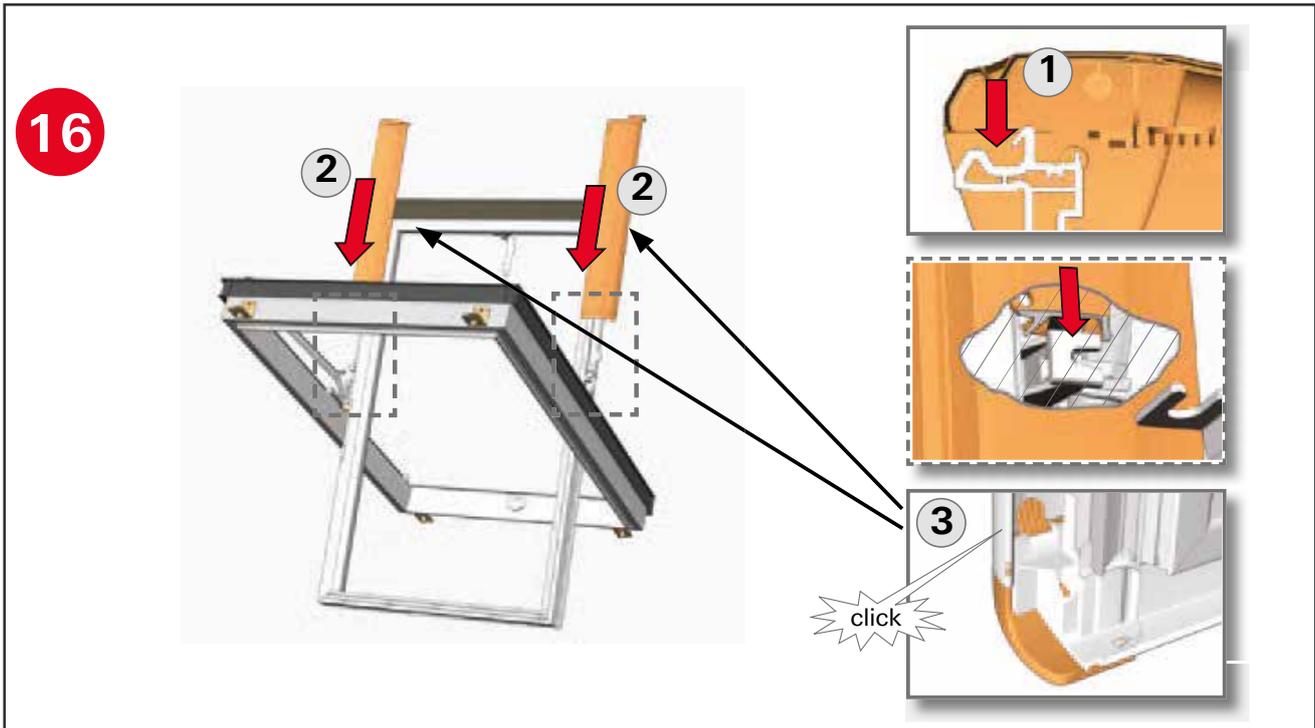




19



A 4x
ø4,0 x30

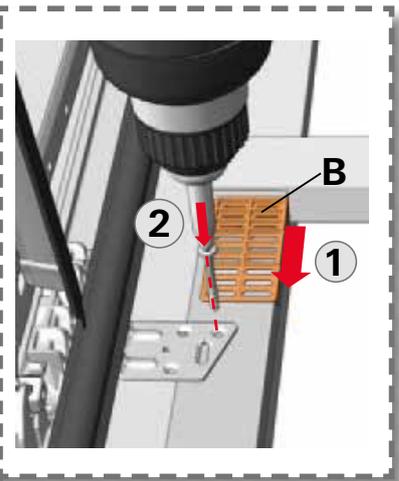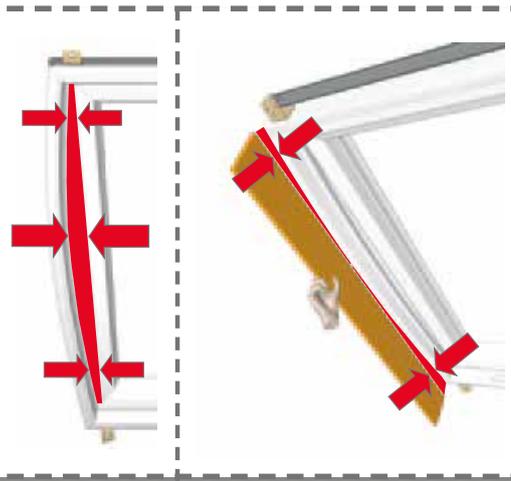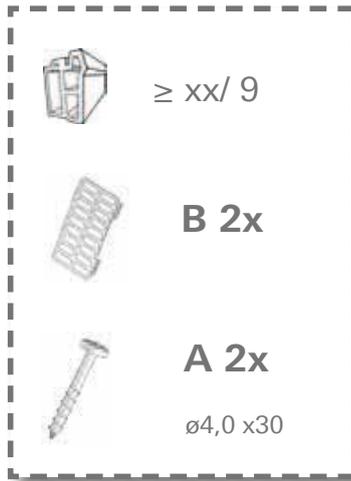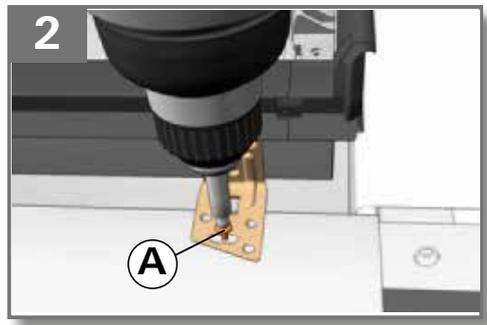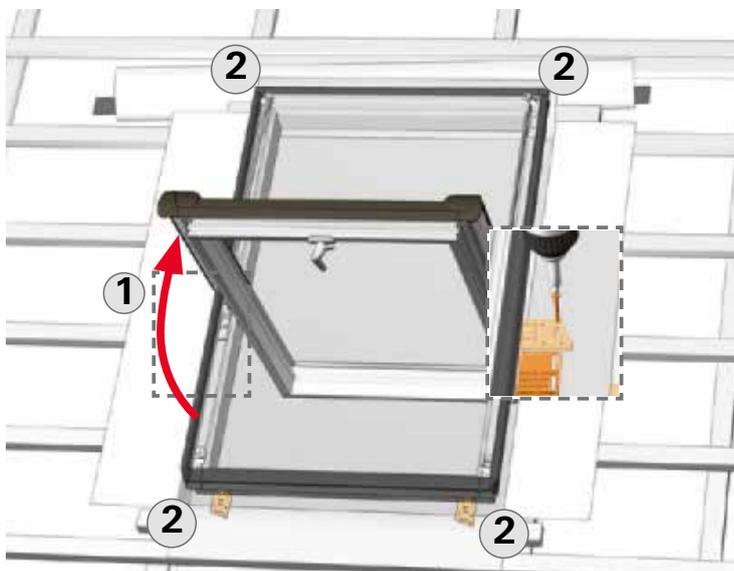


20

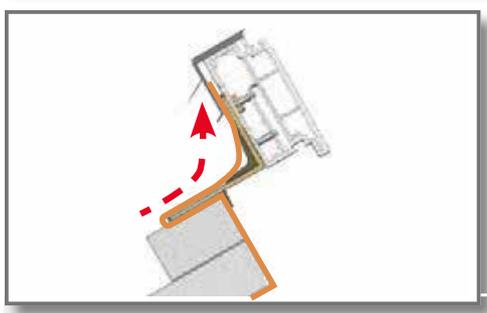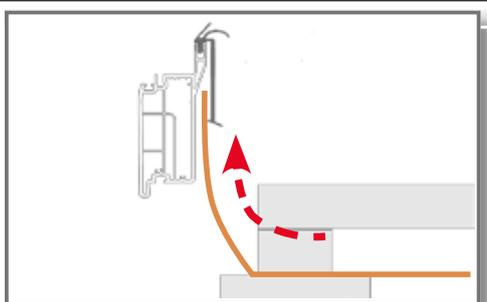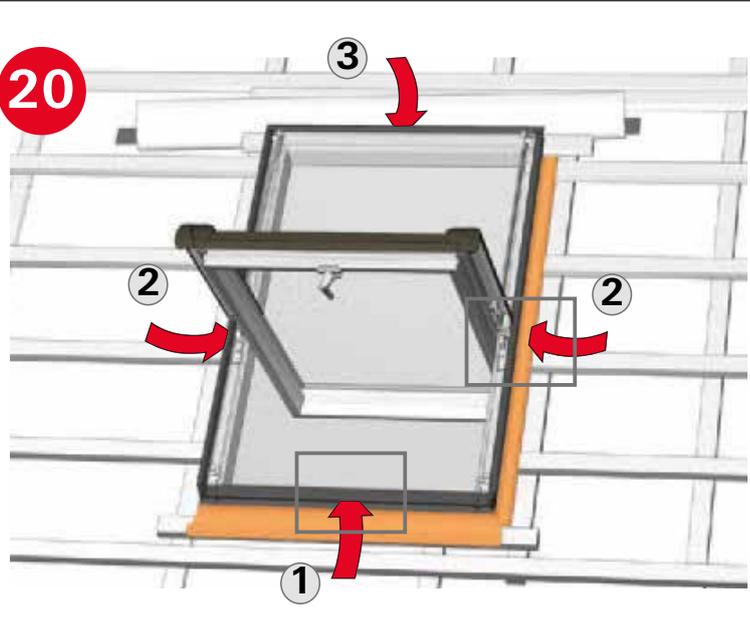


Wellker Dachfenster Premium Kunststoff R4 made by Roto





21 

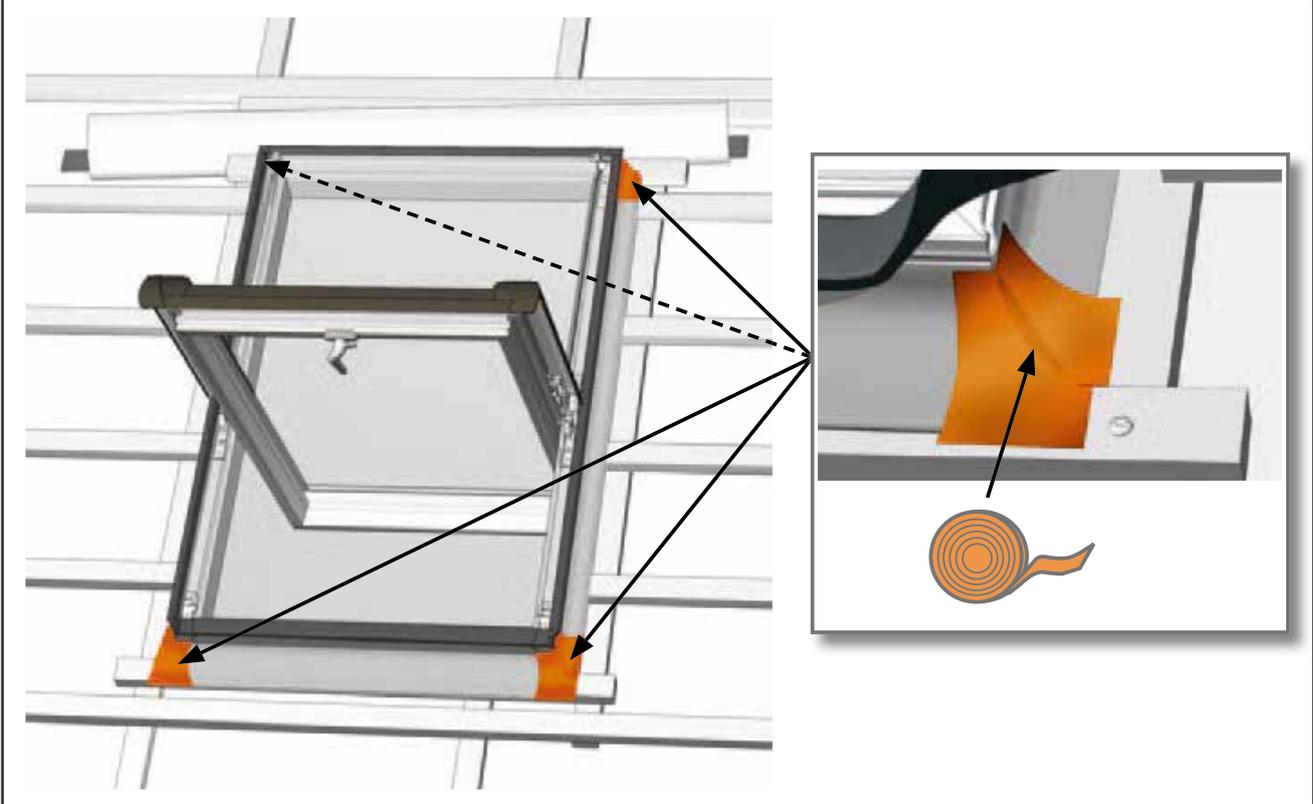







22   C 2x
ø3,5 x20

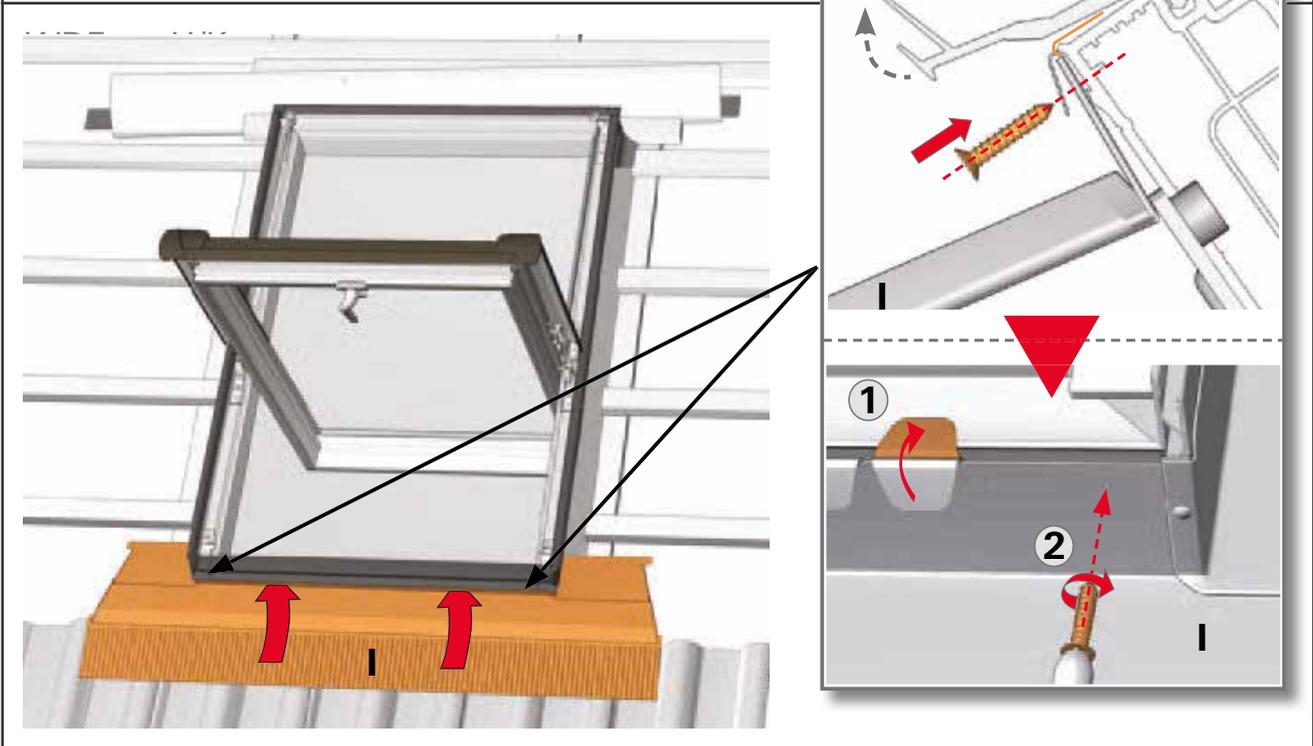

Wellker Dachfenster Premium Kunststoff R4 made by Roto

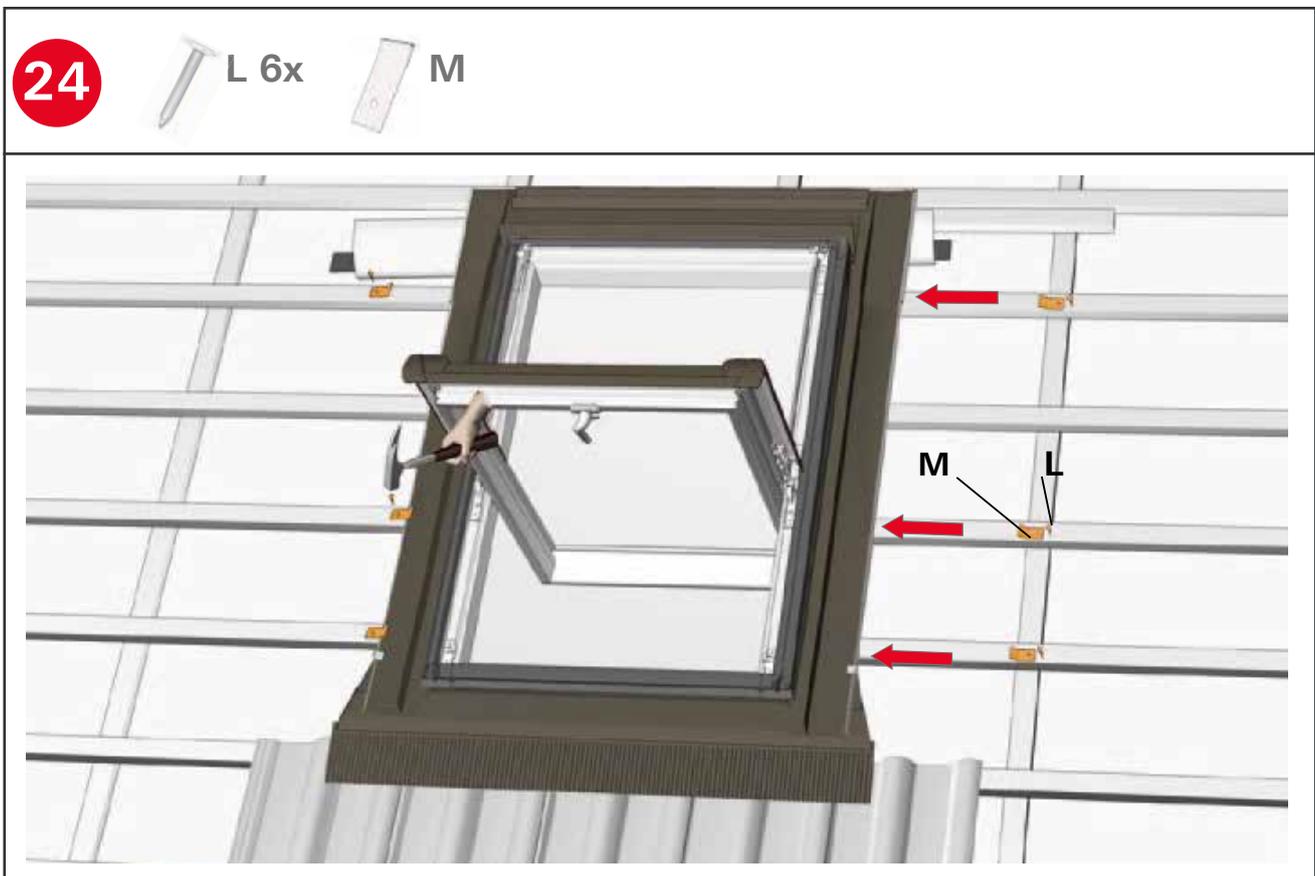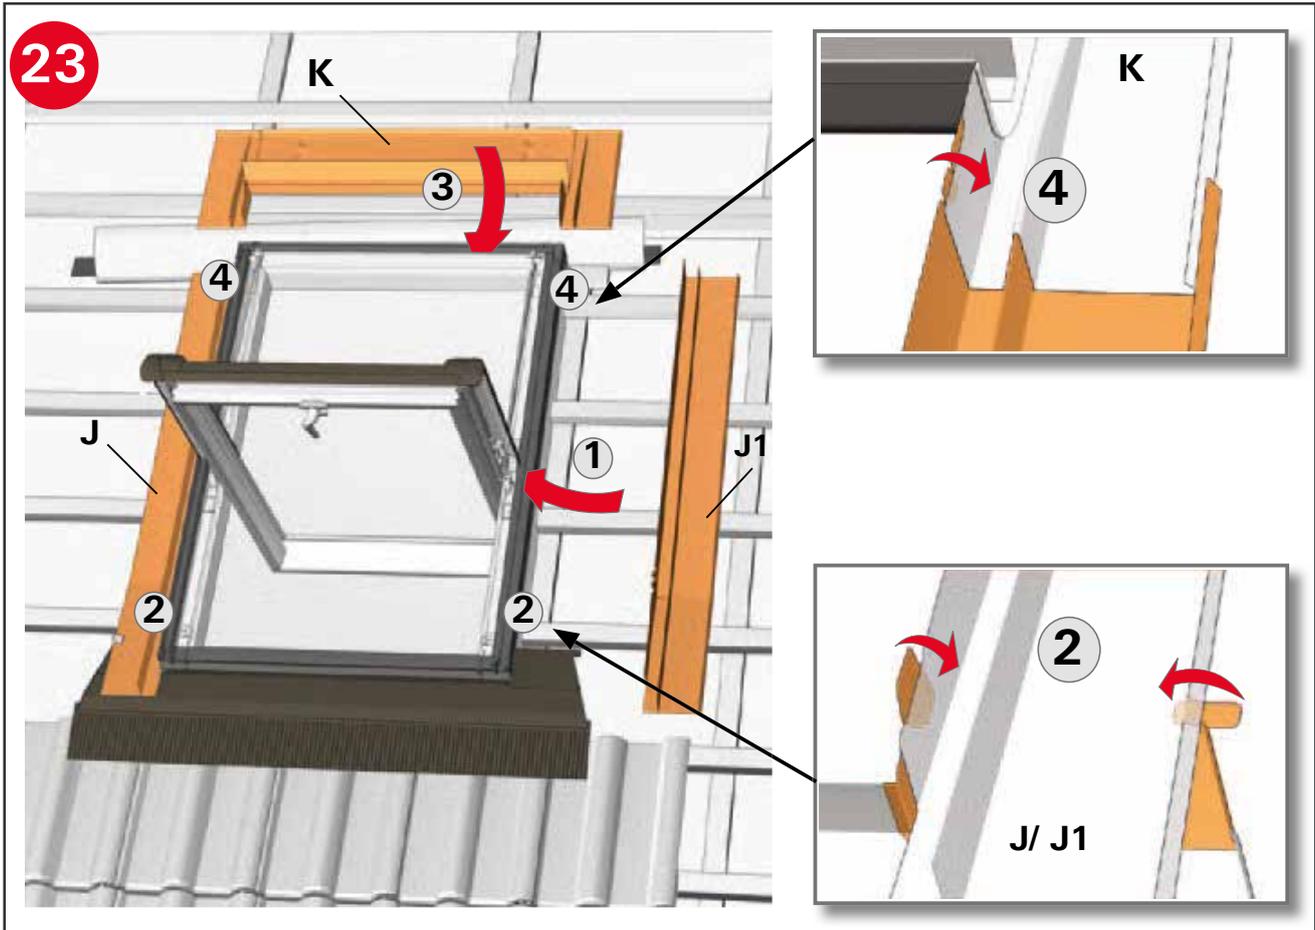

Wellker Dachfenster Premium Kunststoff R4 made by Roto

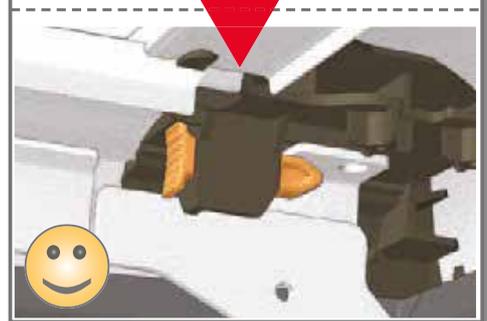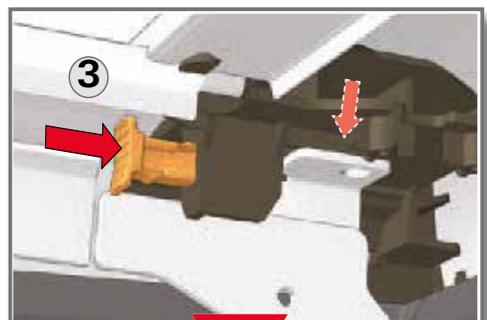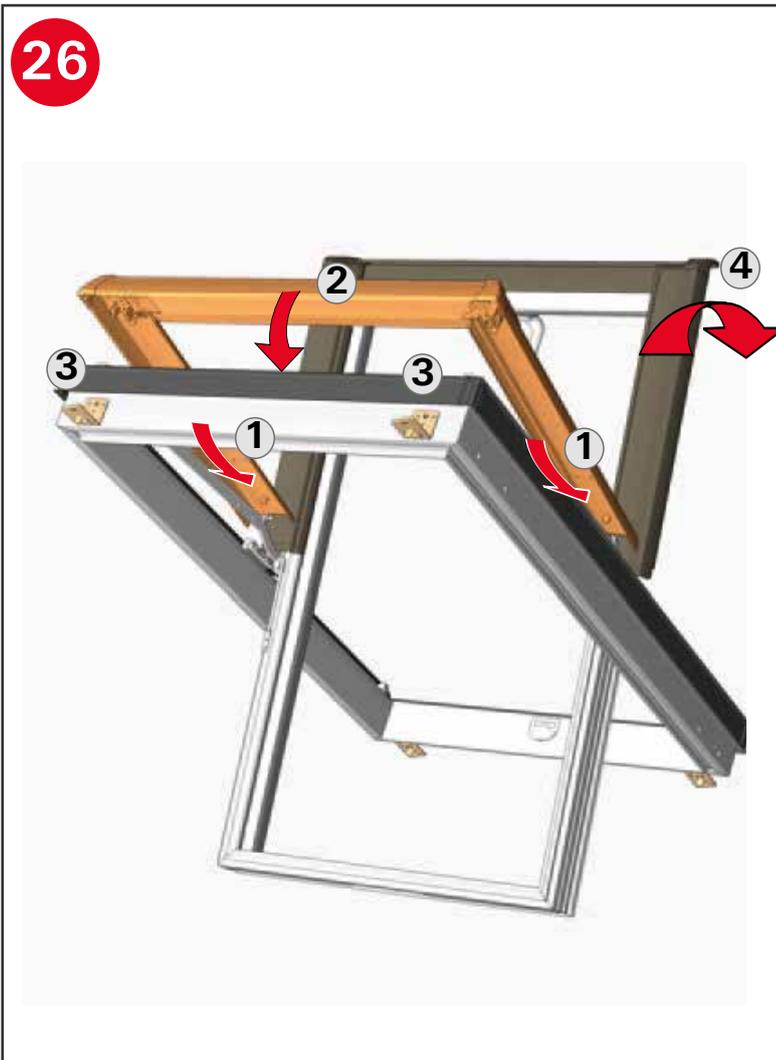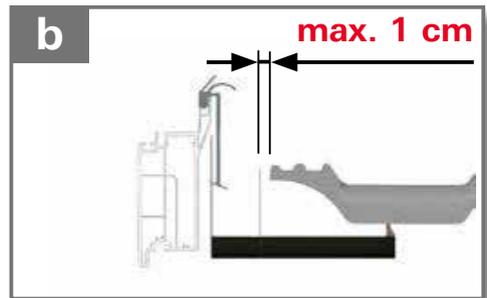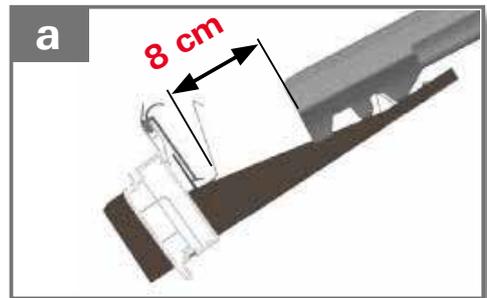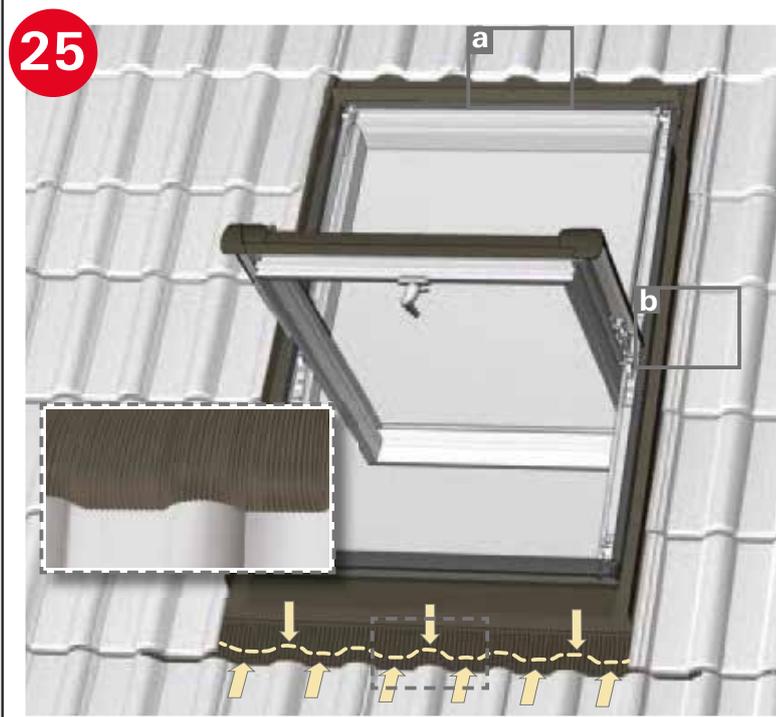

Wellker Dachfenster Premium Kunststoff R4 made by Roto





27

WDF R4. K



G 8x

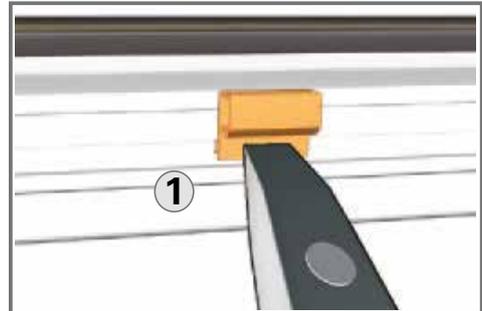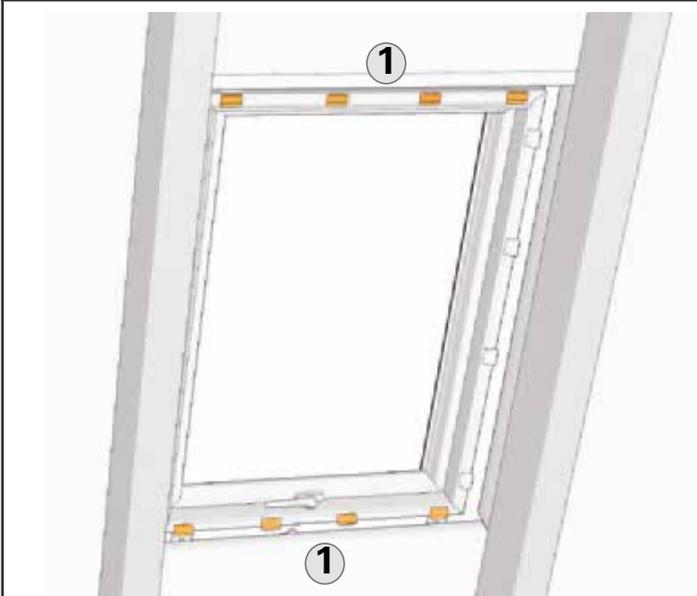

28

